


ABBOTT RENTAL & PARTY STORE
 502 UNION STREET, LITTLETON, NH
 603-444-6557 WWW.ABBOTTRENTAL.COM

NACHO CHEESE WARMER
 RENTAL DIRECTIONS

PARTS INCLUDED: Warming Unit, Spacer, Rim, Cover, Ladle
 UNIT MUST BE RETURNED CLEAN TO AVOID A CLEANING CHARGE

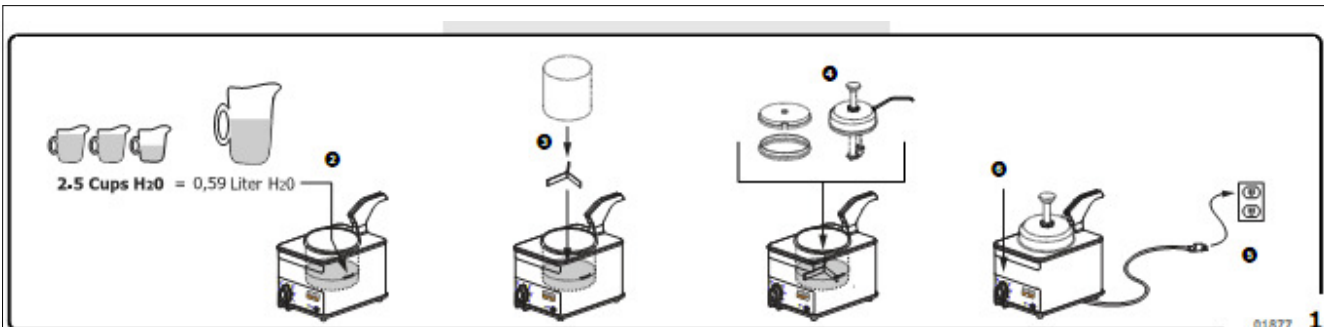

UNIT SET-UP

- 1 ALWAYS CLEAN UNIT THOROUGHLY BEFORE EACH USE. See UNIT TAKE-DOWN, SAFETY GUIDELINES, and CLEANING.
- 2 FILL WATER VESSEL WITH WATER.
 - Fill to embossed water line inside water vessel or fill with 2 1/2 cups (or 20 oz) water.
 - Do not overfill.
- 3 INSTALL SPACER AND PRODUCT CAN INTO WATER VESSEL (or for FS-455 units, install inset and lid assembly into water vessel).
 - Product being served must always be inside inset and never placed directly into water vessel.

- 4 INSTALL PUMP OR LID INTO/ONTO PRODUCT CAN (or for FS-455 units, disregard this step).


- 5 PLUG CORD IN.

WARNING: This appliance must be earthed. Electrical shock could occur if the unit is not earthed or grounded. This requires all three prongs (terminals) on the cord plug to be plugged into the power source.

- 6 PRESS ROCKER SWITCH "ON" AND TURN THERMOSTAT KNOB TO DESIRED TEMPERATURE ON 120V OR 230V UNIT.

- SET THERMOSTAT KNOB to recommended product serving temperature.
- To heat unit faster, thermostat knob may be rotated to maximum setting TEMPORARILY.
- For products being served which require rethermalization or need to achieve safe hot food holding, see RETHERMALIZATION AND HOT FOOD HOLDING.

01877 1

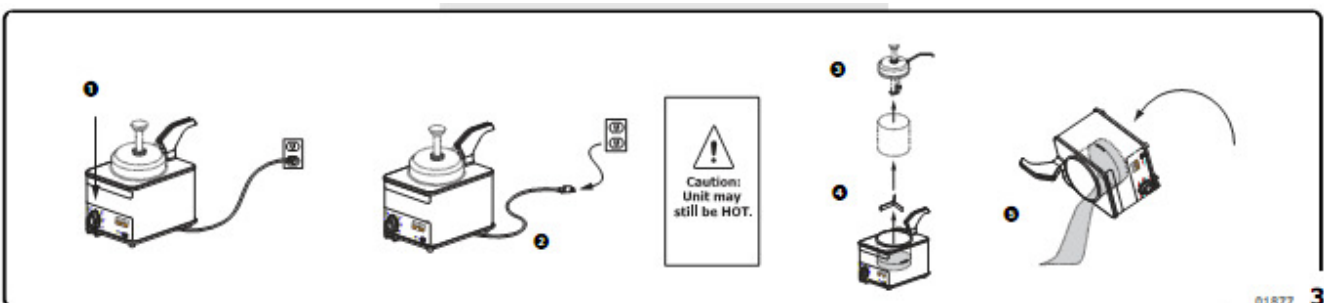

UNIT TAKE-DOWN

- 1 TURN THERMOSTAT KNOB TO ZERO AND PRESS ROCKER SWITCH TO "OFF" IF APPLICABLE.

- 2 UNPLUG CORD.

CAUTION: If unit has already been in use, unit may still be HOT. Allow unit to cool before continuing.



- 3 REMOVE PUMP OR LID FROM PRODUCT CAN (for FS-455 units, remove inset and lid assembly from unit).

- 4 REMOVE PRODUCT CAN AND SPACER FROM WATER VESSEL (for FS-455 units, disregard this step).

- 5 EMPTY WATER OUT OF WATER VESSEL. Tip unit over & drain to pour water out.

01877 3